//CHEVRON DRESSER DIY//


2013/05/20









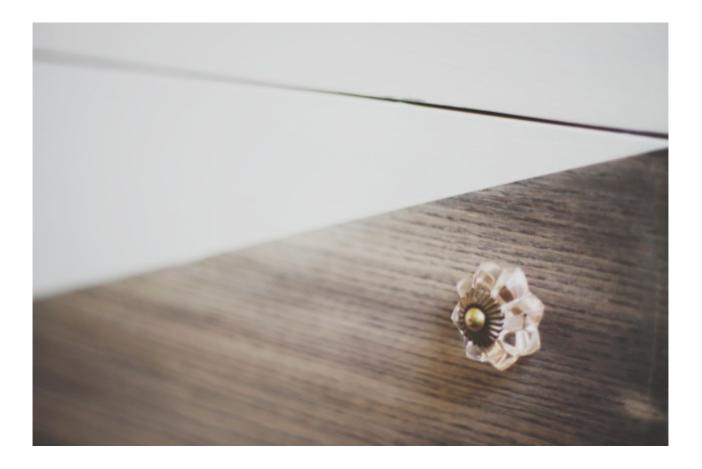



//WHAT YOU NEED//

//A wood stain stripper //A Scraper //Nitrile gloves //Rags //Sandpaper //Painters tape //Paint //Paint brushes //Chalk

Start by applying a generous amount of stripper on your wood surface, we let sit between 20 – 30 minutes before scrapping off. Once you have scrapped the first layer off you can apply another layer (depending on how dark you previous stain was) or continue by wiping down the surface with a rag, and give it a good sand.

Once we had stripped the stain off all the drawers and base of the dresser we began to draw out our Chevron design with chalk. We then placed painters tape over the design and began to paint. We did two coats of the white paint. Once dried we stripped off the tape (carefully) and washed off the chalk with a damp cloth. I then used a polish to give it a nice finish.